





NOT: Ürünün montajı motorunuzdan çıkan orijinal civatalar ile yapılmalıdır.

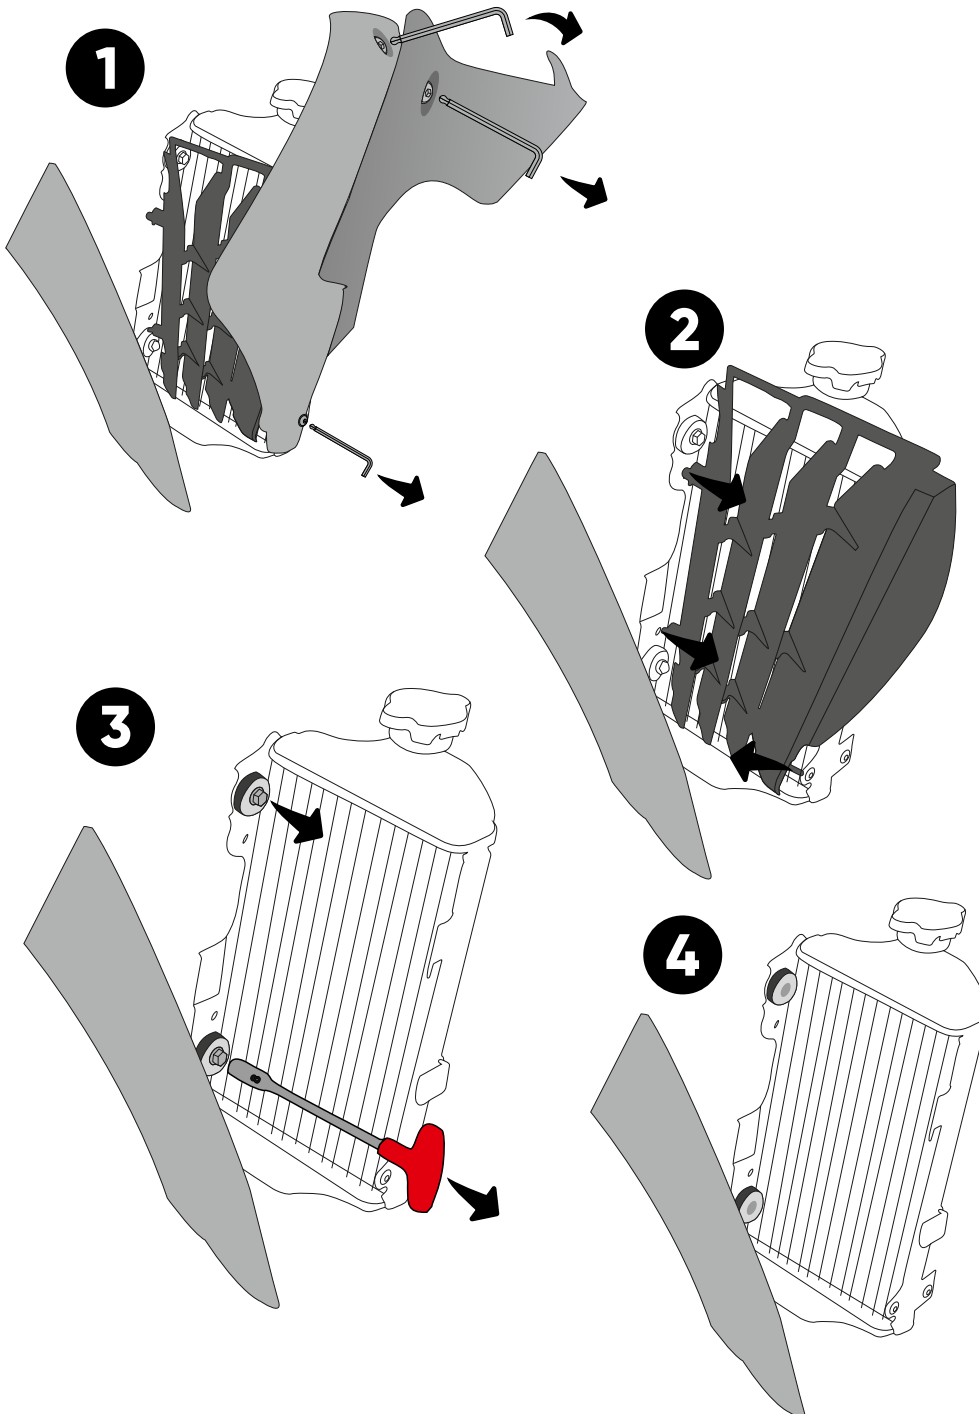

Gerekli Aletler • Required Tools


 (4 Alyan) (#4 Allen)	 (5 Alyan) (#5 Allen)
 (8mm Lokma Anahtar) (8mm Socket Key)	

Montaj Talimatları

- 1- Motorunuzun sağ yanındaki grenajların civatalarını aşama 1'de gösterildiği gibi üst 2 civatayı 5 alyan, alttaki tek civatayı ise 4 alyan yardımıyla çıkarın. (Grenajı tamamen sökmenize gerek yoktur. Bu 3 civatayı sökmeniz yeterlidir.)
- 2- Radyatörünüzün önünde bulunan orijinal plastiğini aşama 2'de gösterildiği gibi çıkarın.
- 3- Aşama 3'te gösterildiği gibi 8mm lokma yardımıyla radyatörünüzün orijinal 2 civatasını ve pulunu çıkarın.
- 4- Aşama 4'teki gibi radyatörünüzü çıplak hale getirin.

Mounting Instructions

- 1- Remove the bolts of the fairings on the right side of your motorcycle with the help of 5 allens, the upper 2 bolts, and the lower single bolt, as shown in Stage 1. (You don't need to completely remove these 3 bolts. You just need to unscrew these 3 bolts.)
- 2- Remove the original plastic in front of your radiator as shown in step 2.
- 3- Remove the original 2 bolts and flake of your radiator with the 8mm socket key as shown in Step 3.
- 4- Bare your radiator as in Step 4.

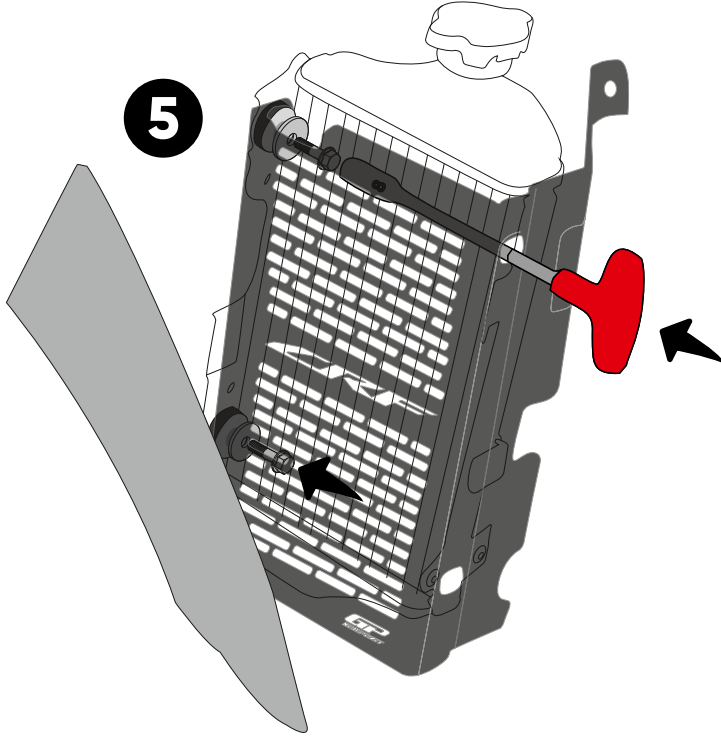

Montaj Talimatları

- 5-** Radyatör korumanızı aşama 5'teki gibi radyatörünüzün üzerine yerleştirin ve 8 mm lokma yardımıyla radyatörünüzden söktüğünüz cıvata ve pulları yine aynı şekilde radyatör korumanın üzerinden monte edin.
- 6-** Monte ettiğiniz cıvataların Aşama 6'daki gibi gözüktüğünden emin olun.
- 7-** Grenajınızdan söktüğünüz cıvataları aynı şekilde geri takın.

Mounting Instructions

- 5-** Place your radiator guard on your radiator as in step 5 and install the bolts and flares that you removed from your radiator with the help of an 8 mm socket, in the same way, on the radiator guard.
- 6-** Make sure the bolts you mount look like Step 6.
- 7-** Mount the bolts that you removed from your fairing in the same way.

