



Paket İeriđi: (Package Contents)

-6 Adet 5x10 pul bařlı civata
(6 pieces of 5x10 screw with
a flat head)

-6 Adet M5 somun
(6 pieces of M5 nut)

-2 Adet ayak
(2 pieces of legs)



Kullanılacak Takımlar: (Necessary Tools)

No:24-8 Anahtar
(Number:24,8 Wrench)


No:3 Alyan
(Number:3 Allen)

Montaj Videosu:
(Assembly video)



NOTE: Please do not proceed with the product assembly without reading the assembly instructions and important precautions included in the package!!

NOT:Lütfen paket ierisindeki montaj talimatlarını ve önemli uyarıları okumadan ürün montajına başlamayınız!!

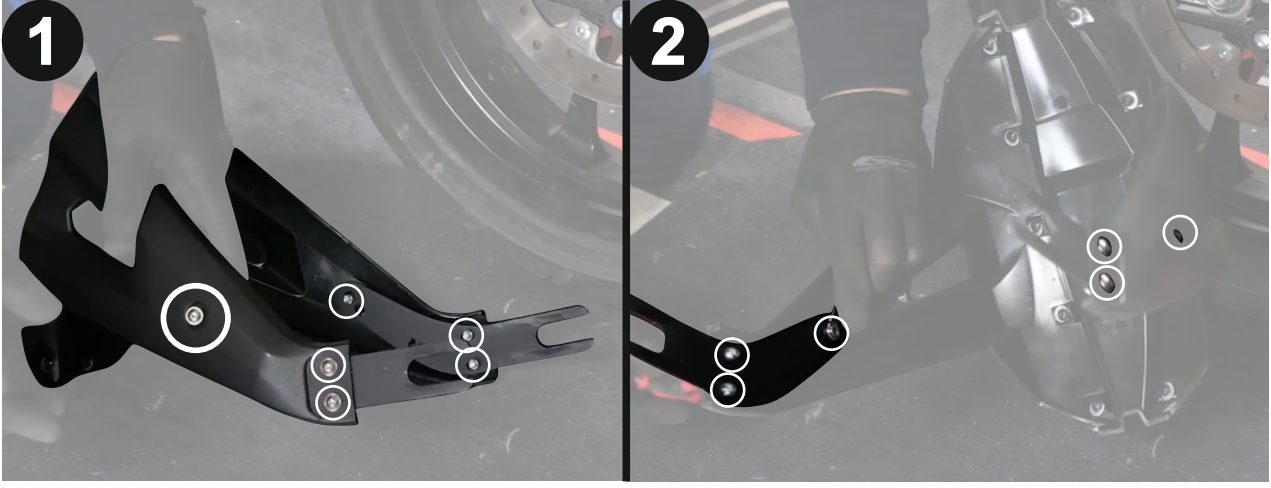


Paket ierisinden ıkan cıvata ve somunu sıyrıcıdaki ayaklarla 3 alyan ve 8 anahtar ile monte ediniz
(Her ayakta 3 adet toplam 6 adet cıvata ve somun vardır.)

(Use the bolts and nuts from the package to assemble the feet of the scraper with 3 hex keys and 8 wrenches (there are 3 bolts and nuts on each foot, for a total of 6)).



Aks somununu videoda gsterildiđi gibi 24 anahtarla gevşetiniz.

(Loosen the axle nut with a 24 wrench as shown in the video.)

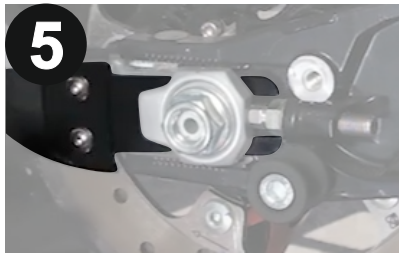

Arka amur sıyrıcıyı aksın arasına gelecek şekilde gsterildiđi gibi konumlandırınız.

(Position the rear mud scraper as shown, between the axles.)



24 Anahtarla monte ediniz.

(Assemble with a 24 wrench.)

Not:Her iki tarafta aynı şekilde montajlanacaktır.

(Note: It will be assembled in the same way on both sides.)