





XMAX Uyumlu Bacak Koruma 2018-2020 • XMAX Compatible Leg Guard 2018-2020

No	Adet • Amount	Parça • Parts
A	2 x	 (Bacak Koruma) (Legguards)
★	2 x	 (Orijinal Vida) (Original Screw)

Gerekli Aletler • Required Tools

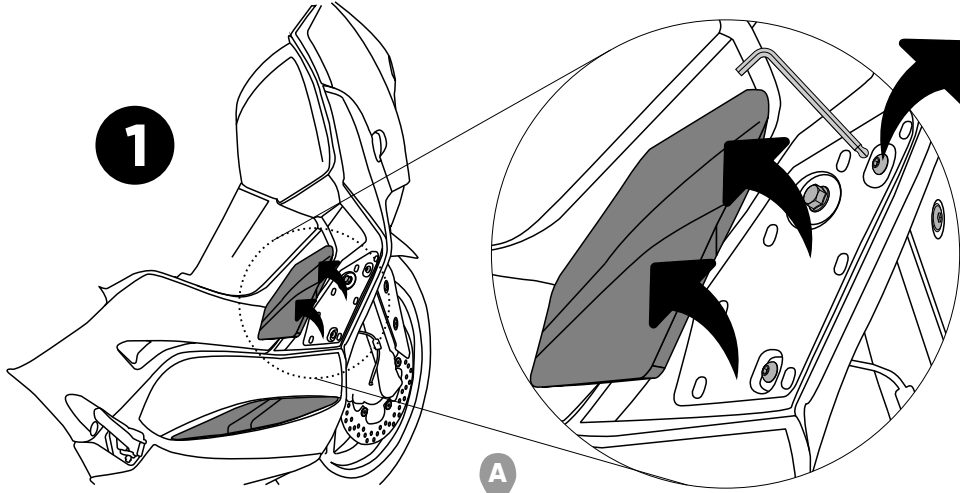

Montaj Talimatları

- 1- Aşama 1'de gösterilen motosikletin orijinal üst paspasını deliklerinden çıkartın. Paspasın üst köşesinde bulunan orijinal bombe başlı vidayı yerinden 4 alyan yardımıyla çıkartın.
- 2- Bacak korumayı 2. görseldeki gibi yapışkanlarını kaldırıp motora yerleştirin. Çıkarttığınız bombe başlı vidanın yuvasına bacak korumanın iç kısmında bulunan vida yuvasını yerleştirin ve aynı orijinal vidayı üstünden tekrar monte edin.

Mounting Instructions

- 1- Remove the motorcycle's original top mat shown in Stage 1 from its holes. Remove the original round head screw in the upper corner of the mat with the help of 4 hex.
- 2- Place the leg guard on the motor as in the 2nd image. The slot of the round head screw you removed can be inserted into the Place the screw holder and reassemble the same original screw on top.

